TURBOSPEED[™]

คู่มือการติดตั้ง TurboSpeed NR3661 LTE VoIP Router

<u>รายละเอียด</u>



Knowing the appearance of your device

(1) Phone Port
(3) LAN Port
(5) DC Power
(7) WLAN ON/OFF Switch
(9) WPS Button
(10) External ANT interface
(11)SIM Card

(2) Battery(4) USB(6) Power Switch(8) Reset Button

SIG TEL WPS WAAN 4GILTE POWER

Туре	Status	Description				
	All off	no signal (the signal status can be checked by terminal configuration page)				
	One	The signal is poor				
SIG	Two	Signal is moderate				
	Three	Signal is good				
	All on	Signal is very good				
TEL	Off	Phone is not used				
	On	Dialing or making call				
WPS	Flicker	Press WPS key for 4 seconds, then release, the WPS lights will be flashing. If device has been connected, WPS light will be off. If device is always not connected, the light will just be flashing 2 minutes, then to go out				
WLAN	ON	WIFI is opened and has data transmission				
	Off	WIFI unopened				
4G/LTE	Blue	Connected the internet				
	Yellow	not connected or trying to connect SIM				
	Off	No battery				
Battery	Blue	Battery is charging or sufficient charge				
indicator	yellow	Battery low				
Adapter	Off	Battery power supply				
indicator	Blue	Adapter power supply				
POWER	Blue On	Power normal, the router power on				
	Blue Off	Power abnormal, the router power off				

<u>การติดตั้ง</u>

- 1. ใส่ SIM
- 2. ต่อ battery
- 3. ต่ออะแดปเตอร์ที่ช่อง DC
- 4. ต่อสายแลนจากช่อง PC ไปยังคอมพิวเตอร์
- 5. เปิด Switch ON ด้านข้าง
- 6. รอจนหน้าจอแสดงสถานะ สัญญาณโทรศัพท์ ขึ้นจึงเริ่มตั้งค่าการใช้งาน

<u>วิธีการตั้งค่าโดยเว็บคอนฟิก</u>

 เปิด Browser เช่น Internet Explorer (IE) หรือ Google Chrome พิมพ์ <u>http://192.168.1.1</u> แล้วกดปุ่ม Enter จะปรากฏหน้าต่าง Status ให้เลือก login ที่มุมขวาบน

4GLTE	VOIP 3G 52015 , ii 🕮 t 🚛 🛜 Refresh Login
Status	
Platform Version	V3
SIM Status	Normal
Network Mode	3G
IPv4 Status	Connected
WAN IP Address	172.33.4.86
IPv4 DNS	172.24.88.164,172.24.24.164
3G Signal Strength(dBm)	-56
LTE Signal Strength(dBm)	
Internet Usage	
Total Traffic	
Uplink Traffic	
Downlink Traffic	
Uplink Rate	
Downlink Rate	
Run Time	01:11:15
LTE Signal Status	
PLMN	52015/52015
Service Status	Normal
PhysCellid	89
Cell Id	0164907-025
RSRQ(dB)	107
RSRP(dBm)	
SINR	-20
Roaming	No
BAND	1
MCS	
CQI	
RSSI(dBm)	-56
Antenna Status	

2. จะปรากฏหน้าต่าง Login ให้ใส่ Username: admin , password: tot





SIP Domain: IP SoftSwitch ตามแต่ละพื้นที่ที่กำหนด Auth Name: Username หมายเลขพื้นฐาน Phone Name: Username หมายเลขพื้นฐาน Reg Account: Username หมายเลขพื้นฐาน Reg Password: Password หมายเลขพื้นฐาน กด Apply

2.1 เลือก Device Settings/Voice Settings/SIP Server.

4Gure				VOIP 3G 52015 ,II 🖤tl 📶 🛜t Logout			
Home	Quick Settings	Device Settings SMS				System Settings	
<			Voice S	Settings			
WB Mode	SIP Server1	Status Booisto	Success				
Volte APN	Authorization S	Status Authori:	ation Success				
SIP ALG	Reg Server *	Address	к• (ж.	XXXXXX			
Digitmap Settings	SIP Domain *	Prot: * Domain	50	50 XXX,XXX,XXX			
Hotline Settings		Prot: *	50	50			
Line Reversal	SIP Proxy	Address					
SIP Server		Prot: Enabled	50	50			
	Authorization:	Auth Na	me: Ox	000000X			
		Phone I	kame: 0xx	0000000			
		Reg Ac	ount: 0x	0000000			
		Reg Pa	isword:			Apply	



สอบถามข้อมูลเพิ่มเติม กรุณาติดต่อ บริษัท แอสตรา คอมมิวนิเคชั่น เซอร์วิส จำกัด โทรศัพท์ : 0-2116-3999 โทรสาร : 0-2014-2988

www.astra.co.th





2.2 ใส่ค่า

Reg Server: IP SoftSwitch ตามแต่ละพื้นที่ที่กำหนด